






































## DF200GKV Assembling Instruction


Please kindly attention that please check the parts with the motorcycle with the list below. If you find anything missed please contact the local dealer right away.

NO.	Parts	Image	Quantity	NO.	Parts	Image	Qauntity
1	Top Lights and bar		1	10	Sparetire seat		1
2	Front Roll bar		1 set	11	Front bumper PP		1
3	Handle bar		1 set	12	Rear Bumper PP		1
4	Middle rollbar		1	13	Rear roll bar		1 set
5	Front bumper		1	14	Net canvas		3
6	Rear bumper		1	15	Steering wheel		1
7	Battery		1 CTN	16	Front wheel ASSY		2 set
8	Seat		2	17	Rear wheel assy		2 set
9	Rear shock		1根				



Accessories bag including following parts


Accessories bag including following parts							
18	Wheel hub		2	28	Anchor bolts (big)		2
19	wheel hub		2	29	Battery strap		1
20	Tool kit		1	30	Hook		2
21	Rollcage linkage		1	31	Bushing 10*20*10		2
22	Hex flange bolts M8*125		2	32	Hex socket6*16		12
23	Hex flange bolts M8*48		10	33	Flange self-lock nuts M8		10
24	Hex flange bolts M8*25		2	34	Hex flange bolts M8*16		12
25	Hex flange bolts M8*42		2	35	Hex flange nut M6		10
26	Hex flange bolts M6*25		2	36	Circle washer		22
27	Hex flange bolts M6*16		12	37	Washer 6*18		
Sparetire usually planced in the cargo box.							

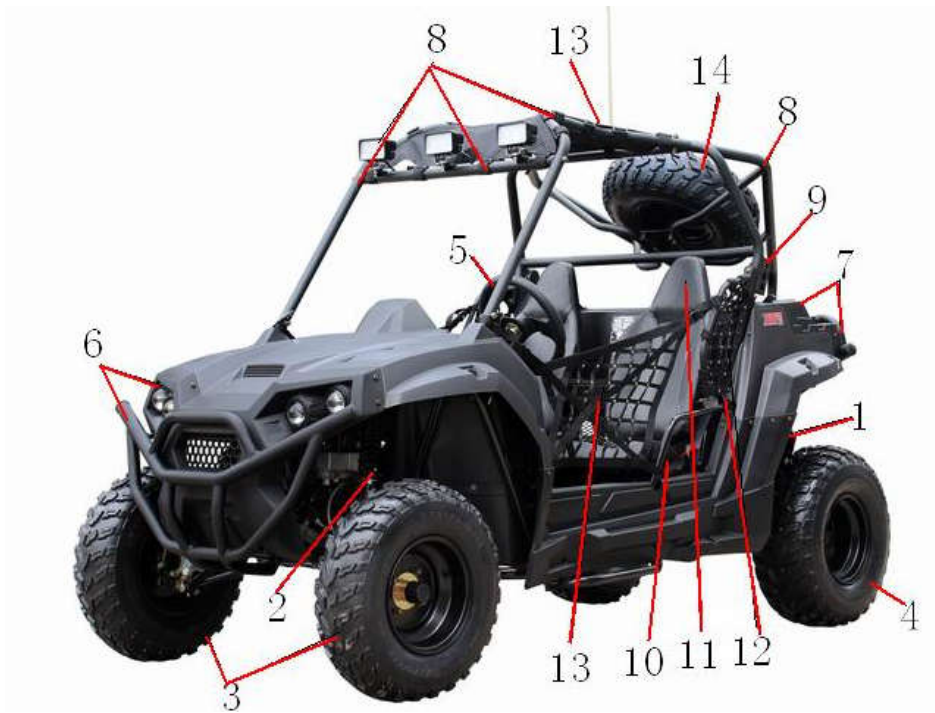

## How to assemble

### 1. preparation before assembly

- 1、 Take the battery out from the box and fill the battery with its instruction.
- 2、 Cut the wire in front of the UTV, remove the lock at the end of the UTV,

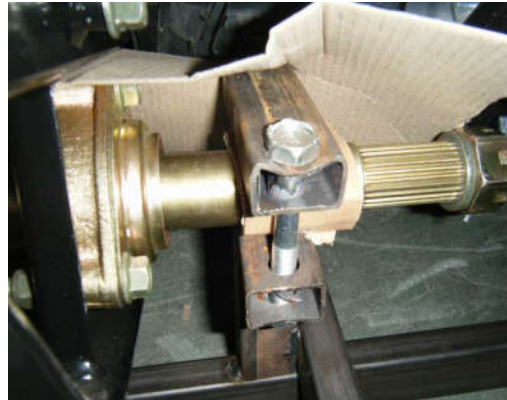

### 2. Rear shock (left& right)

- 1.Take the bolt off from the shock seat at left side of the rear engine basket



2. Raise the body gently, swing the left shock down to the seat, inset that bolt just removed in and fasten the nut.



3. Similar to step 1 take the right bolt off. Then take the rear shock from the body and put into the down seat with the bolt and nut.



### 3. The front shock

1. Raise the front chassis with a shelf or jack to approx. 20"; take the bolt off from the spring seat at the front swing arm.



2. After the shock in position, insert the bolt and fasten it.



3. Assemble the other shock in the same way,



#### 4. The Front wheels

1、Chose the 2 tire with stamp 21\*7-10 out and place them in postion, make sure the air valve outside and the tires moves as the arrow mark.



2、Loose the 4 nuts from the wheel hub seat and take the tire on. Fasten the nut after you take the plain washer and spring washer.



3、Chose the wheel hub cover on when you fasten all nuts.(small rubber cover for front wheels or any 2chromed co



4、Put on the other tire in same way. Then put the UTV down.

## 5. Rear wheels

- 1、 Raise the rear of the UTV to approx.20". Take the pin, slotted nut and washer off.



- 2、 Chose 1 tire marked 22\*10-10 and keep the air valve outside and move as the arrow show.



- 3、 Put on this tire and fasten the nut after placed the spring washer.



- 4、 Insert the pin and make it to the anchor shape



- 5、Chose one hub cover and cover the nuts ( bigger rubber cover or any chromed cover)



- 6、Assemble another rear wheel on in the same way. Move the UTV out of the crate now.

## 6. Steering wheel

- 1、Steer and make the front wheels straight forwarder as the chassis



- 2、Adjust the wheel seat right as below pic show and take off the bolts from the wheel seat.



- 3、Put the wheel on and make sure the position as the pic below show then fasten the bolts.





4、 Put on wheel cover on.



## 7. Front bumper


1. Chose the below bolts and nuts out. Hex socket pan head bolts 6\*18 X6, Hex flange nut M6 X6, Hex flange bolt M6x25 X2 (as below pic show)



2. Firstly put on the PP bumper on and inset 2 hex bolts in front of the bumper. Then place the washer and nuts interior of the bumper.



3. Fasten each side with 2 set of bolts in similar way.

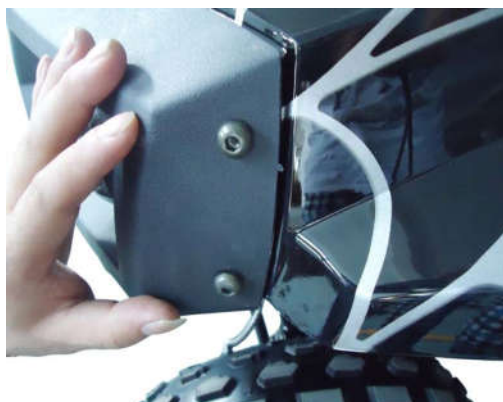



4. Fasten 2 M6X25 bolts to the bottom of the bumper.




5. Chose 4 pcs of M8X16 bolts and the front bumper out.



6. Firstly fasten the bolts to the bottom of the bumper and insert 4 bolts on. Fasten the higher bolts.



7. Plug in the headlight wire to the lock as pic shows. The same way to the other side.

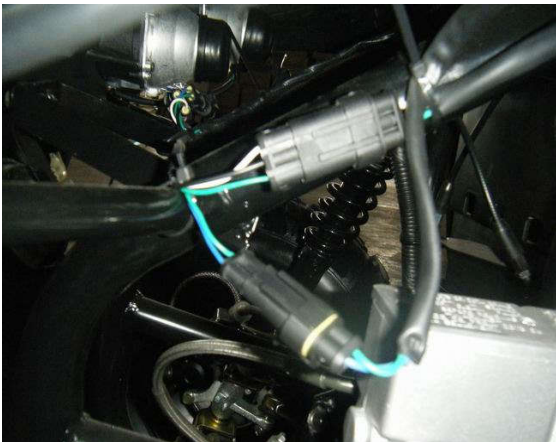


## 8. Rear bumper

1. Take the 2 set of anchor bolts out. Take 1 cable tie to fasten the cables at the bottom and plug in the wires.



2. Put the wires upside and put on the rear PP bumper. Pay attention to the 2 holes for the anchor bolts and inset the bolts in places firstly.

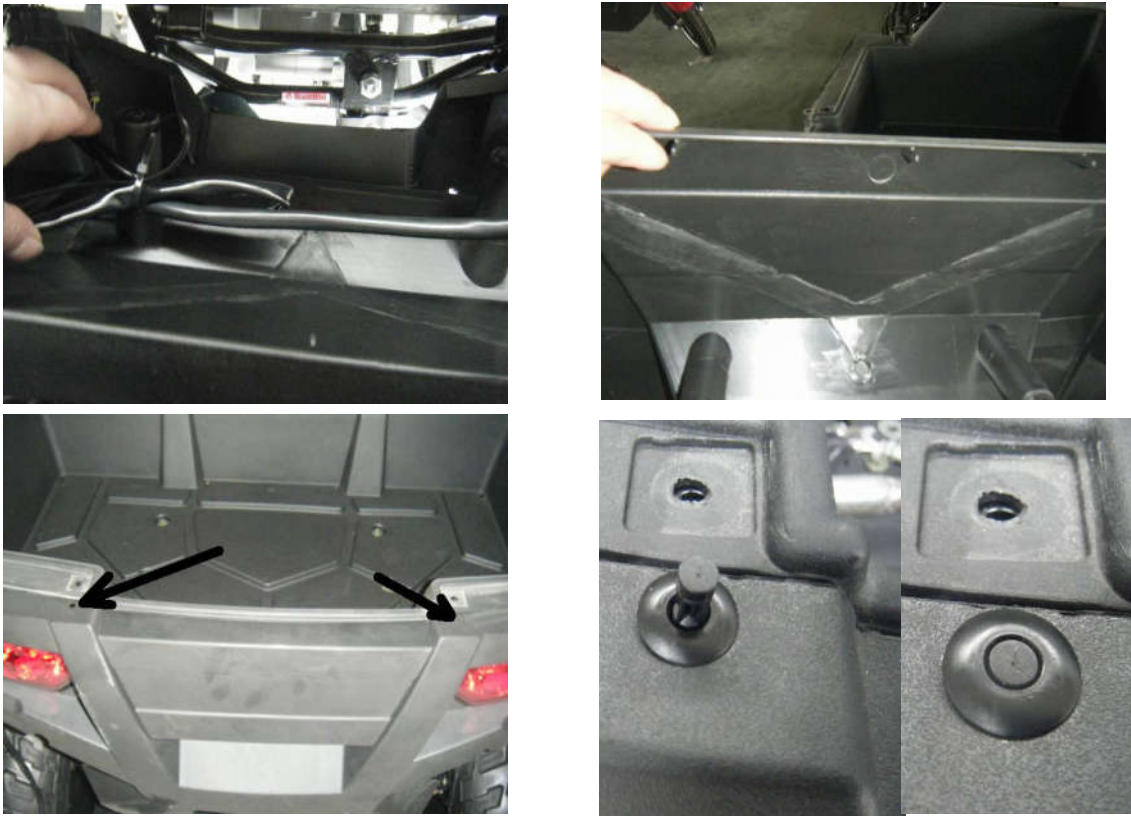

3. Take the following bolts out as below pic show Hex socket pan head bolts M6x16 X4, Washer M6-18 X4, Hex flange nuts M6 X4





4. Inset the M6x16 bolts from outside as pic show and fasten with the washer and hex flange nuts.



5. Take 2 pcs of M6x16 bolts to the middle of the rear bumper and fasten with screw driver.



6. Take below bolts out : Hex flange bolts M8\*25 X2, M6\*16 X2, Bushing 10\*20\*10 X2 and M8\*125 X2



7. Place 2 bushing on the 2 side of cargo box and then put on the rear bumper.





8. Fasten with 2 M8x25 bolts here and fasten with 2 M8x125 at the bottom of the bumper.



9. Take out 2 pcs of bolt M6x16 and fasten these to the bottom of the rear bumper as pics show.



10. Take out the 2 hex socket bolts M6x16 and cargo box hook. Place the hook on the bumper with the bolts.



## 9. The roll cage

1. Take out the front rollcage and rollcage joint, Hex flange bolts M8\*48 x4, Hex nuts M8 x4, Circle washer X8. Take 4 washer to the hex bolts and circle fading out.



2. Take the right front roll bar( with wires) out and connect with a joint linkage with the bolts as pic below shows (DO NOT fasten the bolts now)



3. Put the right roll bar on the joint of the chassis, fasten with 1 set of bolt M9\*48. Insert the bolt from outside and place another circle washer and nuts, fasten.



4. Put on the left roll bar in same way and then connect with the right roll bar.



5. Put the set of bolts to the left rollbar and chassis seat and fasten with another circle washer and nut. Take another set bolts to fasten the left roll bar and linkage from right roll bar. (DO NOT fasten this bolt here)



6. Take out the middle roll bar and hex bolts M8\*48 x2, M8 X2 and circle washer by 4.




7. Put on the middle rollbar (make sure it connect with left and right roll bar at the same time). Insert 2 set of bolts from upside and fasten with 1 circle washer and hex nuts. (DO NOT fasten the bolts now).





8. Take 4 hex bolt M8\*16 out and put them on the end of middle roll bar ( You may move the rollbar end with the screw driver if need and DO NOT fasten now)

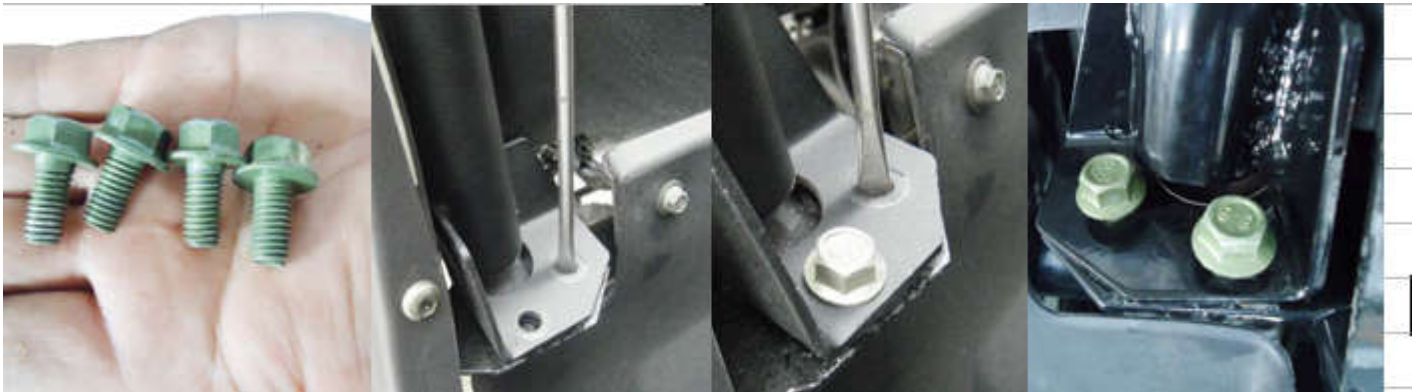

9. Take out the rear roll bar left and right (as pic show). Take out hex bolts M8\*48 X4 ,Hex flange nut X4, circle washer X8 out. Put 4 washer to the bolts as before.



Rear roll bar left

Rear roll bar right

10. Take the rear roll bar to the joint of middle roll bar firstly then put the other end to the chassis. Put on the other side roll bar in same way.



11. Fasten the rear roll bar with 4 set of bolts and circle washers as pic show below.



12. Take out M8\*16 bolts and sparetire bracket out. Place the bracket on the rear roll bar as pic show below.



13. Take out the TOP lights bar. Chose M8\*48 X2, Flange nut M8X2, Circle washer X2 out. Put on the washers to the bolts.





14.Put on the top light bar as pic show.




15.Plug in the cables from each light to the main wire.




16.Firstly fasten the bolts at the bottom of the middle rollbar,then the bolts of roll bar. Finally fasten the bolts of the sparetire seat.

## 10. Seat belts

1.Open the cover at end of the belts and screw off the butts and washers only.

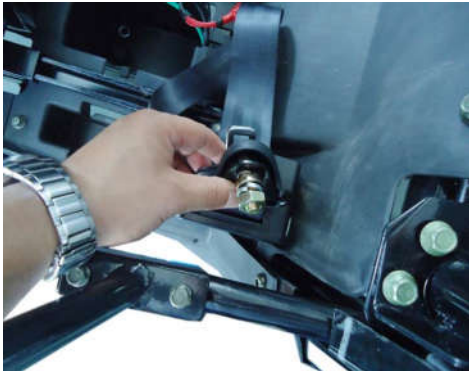


2.Put on the belt en to the frame from inside as pic show. Fasten it with the spring washer and nuts.

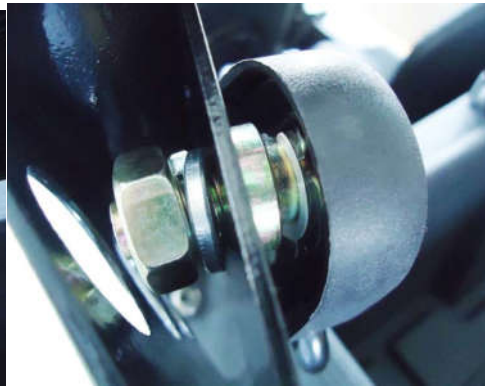




## 11. Battery

When you confirmed the key switch is off, connect the Green wire (or black if no green) to the negative pole (Marked -) while the red wire to the positive pole (Marked +). Fix the battery with the battery strap.

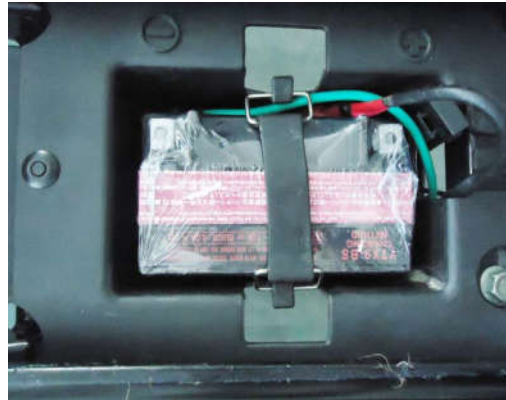

## 12. Seats

1. Take the seat (without key rack) out and screw off the nuts. Put the seat on and inset the seat rod into the lock at the end of passenger room. When the bolts fell into the hole of the chassi fasten with the socket nuts from the bottom.

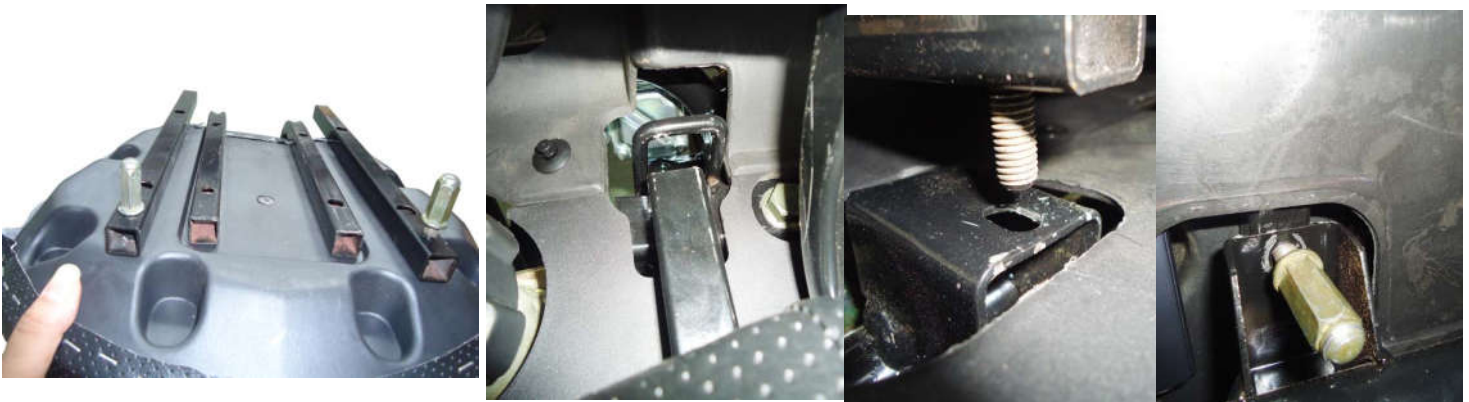

2.1 The driver's seat. screw off the nuts and take the key rack out. The key rack put on the right side while the key face right also. Fix the other rack on the left side.



2.2 Put on the left seat and put the key rack into the rack under the seat. Lift the handle lever you could move the seat.



### 13. Handle bar

1. Take out the handle bar and 8 pcs of hex flange bolts M6\*16.



2. Put on the handle bar at both side of the door with the bolts.





## 14. Side net canvas

1. Below pic show the small net canvas. Fasten it to the handle bar with the sticker in order as pic show.



2. Hange the big net canvas in the order as pic show.







3.Put the top canvans out and the longer side is forwarder.Strap the canvas from the middle and then fasten all in order as pic show.



### 15.Spare tire

Put on the tire on the rear roll bar and fasten with the 2 nuts.

















over )







































